



601 FlagHouse Drive
Hasbrouck Heights, NJ 07604-3116
www.flaghouse.com

INTERACTIVE FOUNTAIN PANEL (US Item # 37698; CN Item # 379r98)

CONTENTS:

(1) Interactive Fountain Panel

Please note: Fixings not included.

TO WALL MOUNT PANEL:

IMPORTANT: This panel weighs approximately 46 lbs. Please consider this when fixing. Also, please verify the construction of the wall to which the panel is being affixed and use the appropriate fittings.

Attach fixings such as mirror plates to the back of the panel. Fixings are not supplied as these depend on the surface to which the panel will be affixed. Check the fixings i.e. mirror plates you buy can easily support 46 lbs. You may wish to attach two mirror plates to the back of the panel at the top and two on the back at the bottom.

Note: When attaching fixings to the back of the panel please proceed with caution. Electrical assemblies are inside the panel.

OPERATION:

A ¼-inch jack socket is in the panel's center at the bottom of the screen. Without a jack plug inserted, the display will cycle continuously. Any ROMPA® switch may be plugged into the socket. When the switch is depressed the display will enact one cycle and stop until the switch is depressed again. A simple push button switch is included. When the switch is first plugged in, the display will continue until it reaches a starting point. It is then ready for manual control. Similarly, if the switch is already plugged in when the electrical supply to the panel is applied, the first cycle may be incomplete depending how far through it had gone when last used.

CARE & MAINTENANCE:

To access the inside of the panel:

Remove the whole panel from the wall.

Lay the panel face up on a flat, stable surface.

Remove the screws from around the side of the panel that joins the plastic panel to its wooden back.

Carefully remove the plastic front cover (as a whole) from the wooden back.

Light source:

The colored light source is housed at the top of the panel behind the cover and consists of a powerful lamp shining through a rotating wheel and into the ends of the glass fibers.

Color Drum:

Remove the color drum by slackening the grub screw, using a fine screwdriver through one of the four large holes in the disc. Remove the lamp by carefully pulling it out of its socket and carefully replacing it. Refit the color drum and front cover.

Should the colors cease to change it suggests that the drum drive motor or its gearbox has failed. Do not run the panel in this condition as the color drum may become locally damaged by the lamp's concentrated heat.

If the cover is removed a large grey PCB box will be seen in the top left corner. This contains the electronics controlling the display and a fuse. If total electrical failure of the panel occurs this fuse should be checked first.

Once fuses have been checked and in the unlikely event that the product will still not function please seek advice. Only a qualified person should attempt repair. The panel may be removed from the wall and the front cover removed. Unplug before removing the panel.

TECHNICAL SPECIFICATIONS:

110V

Power Supply SPS 60

Output Fuse: T4 Amp

Input Fuse: T630mA

Important Note

Only ROMPA[®] switches should be used in conjunction with the Fountain Panel. Radios, amplifiers, or other equipment terminated in jack plugs should never be connected. Damage to the electronics of either or both items is likely to follow. Similarly a handheld microphone must not be plugged straight into the panel.

SAFETY

Always supervise this product's use.

Handle with care.

For indoor use only.

DISCLAIMER: THIS PRODUCT MUST ALWAYS BE USED UNDER THE DIRECT SUPERVISISON OF A CAREGIVER.

To ensure safety, this product must be assembled, installed, and used in strict conformity with the instructions and specifications provided. All warranties of any kind, including, but not limited to, warranties of merchantability or fitness for a particular purpose, are expressly disclaimed and no warranty of any kind is implied or expressly made. FlagHouse shall not be liable for any direct, indirect, special, incidental, or consequential damages arising or resulting from the sale, use, replacement, or repair of this product.

Please direct your questions or concerns regarding this product to the appropriate office listed below:

In the U.S.

FlagHouse, 601 FlagHouse Drive, Hasbrouck Heights, NJ 07604-3116

Phone 800-793-7900 Fax 800-793-7922 Email info@flaghouse.com

In Canada

FlagHouse Canada, 235 Yorkland Blvd., Suite 105, North York, Ontario M2J 4Y8

Phone 800-265-6900 Fax 800-265-6922 Email flaghousecanada@flaghouse.com

International Customers

FlagHouse, 601 FlagHouse Drive, Hasbrouck Heights, NJ 07604-3116

Phone 201-288-7600

Fax 201-288-7887

8AM-6PM Eastern Time